





HELIX⁺

Double Stroller Conversion Kit
for **G** Series Strollers

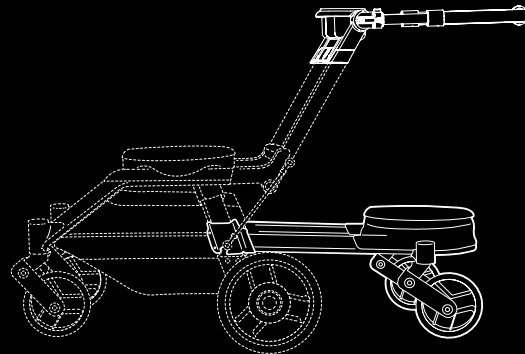

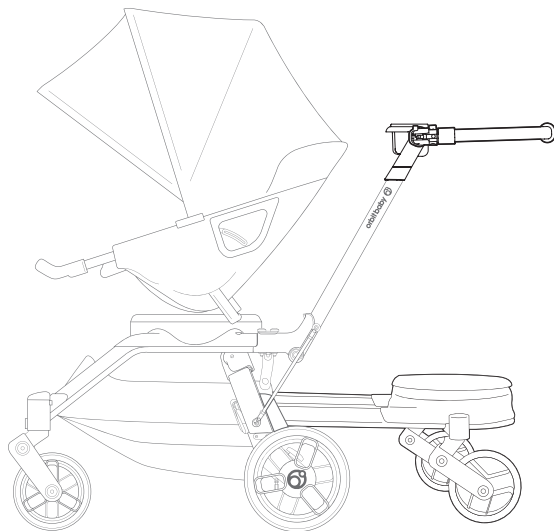

Orbit Global, Inc.
P.O. Box 699,
Ventura CA 93002, US
888-475-4056
hello@orbitbaby.com



INDEX

EN



Warnings

04



Getting started

10



Using your Orbit Baby seats with the Helix+

17



Traveling & Storage

23



Maintenance & Cleaning

27



WARNING FAILURE TO FOLLOW THESE WARNINGS AND THE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH

- Do not let others use the Orbit Baby Helix+ or other connected Orbit Baby products unless they understand how to properly use them.
- Do not use the stroller if any parts are damaged, broken or missing. If the instruction manual is missing or you need replacement parts or assistance, see the contact information included with this manual.
- Maximum child weight for the compatible Infant Car seat on the Helix+ Frame is 26.5lbs(12kg).
- Maximum child height for the compatible seat on the Helix+ Frame is 34in (86cm). Note that 34in (86cm) is a reduced height limit for the stroller seat when using it on the SmartHub® of Helix+ Frame.

PREVENT SERIOUS INJURY OR DEATH

- NEVER leave your child unattended.
- Always provide the supervision necessary for the continued safety of your child.
- Stroller must be fully erected and locked in position prior to use. Listen for the audible CLICK to confirm that it is fully deployed.
- Maximum child weight for the G series Stroller seat on the Helix+ frame is 50lbs (23kg).
- Helix+ Double Stroller Adapter can only be used on G Series Strollers (not X5 or M+).
- Never use Orbit Baby Toddler Car Seat on the Helix+ SmartHub®.
- ALWAYS remove your child from the rear SmartHub® seat before removing the Helix+ SmartHub® from the stroller.
- Always remove the Helix+ SmartHub® before attaching the Orbit Baby Sidekick Stroller Board to the rear wheels. Child must hold on to stroller handlebar when riding or standing on the Sidekick.
- Never let your child climb into or out of a seat unassisted.



WARNING

FALL HAZARD: Avoid serious injury from falls or tipover.

- Always make sure the Helix+ SmartHub® is securely locked into the Stroller Frame Connectors before placing your child into the stroller or starting to stroll. Pull backwards on the Helix+ SmartHub® and check that the red stripes on both sides are NOT visible.
- Adult control required. Do not allow your child to stand on, sit on or play with the Helix+ Frame. It is not a toy.
- Always make sure the stroller seat or infant car seat on the Helix+ SmartHub® is locked in the forward-facing position before strolling. Side-facing locked positions are for stationary use only.
- DO NOT use stroller on stairs or escalators with children in it.
- DO NOT try to lift or carry stroller with children in it.

PREVENT STROLLER TIPOVER AND CHILD'S SUDDEN CONTACT WITH STROLLER

- Use caution when maneuvering curbs and irregular surfaces. Always use curb ramps and never try to lift the stroller onto the curb. Do not allow the stroller to drop off the curb.
- Do not place parcels or accessory items in the stroller unless made by or specifically approved by Orbit Baby. Added parcels or accessory items can make the stroller become unstable.
- For your children's protection, make sure that the Protect Pad is properly placed on the handle connecting frame.
- Do not place more than 11lbs (5kg) in the stroller basket. Do not use the stroller basket as a child or pet carrier. Excessive weight may cause a hazardous unstable condition to exist.

WARNING

AVOID BURN INJURY

- When using Helix+ Handlebar always use the ShadePad / Organizer. These liquids may splash and spill onto your child and cause injury.
- Never place hot beverages in cup holders as they may spill and cause injury.

AVOID LOSS OF CONTROL OF THE STROLLER :

- Always use front wheel swivel locks when pushing the stroller on uneven terrain.
- Use caution when pushing stroller on uneven terrain or hills.
- Always lock the parking brake when the stroller is stopped.
- **NEVER** leave the stroller unattended on a hill or incline even when the stroller brake is locked.

Avoid serious injury from falls or sliding out.

- Restraint harness use is required for all use modes when harness is present on the

product. Always secure your child to avoid serious injury from falling or sliding out.

- Always use both the shoulder and lap portions of the harness.
- Never let your child climb into or out of a seat unassisted.

PINCH HAZARD :

- Keep fingers clear of stroller when folding and unfolding the stroller.
- Keep your children's hands and fingers clear of moving parts when adjusting the stroller.
- Keep your children's arms, legs and feet clear when rotating seats and adjusting the seat recline.
- Avoid injury from pinching or finger entrapment. Keep children away when unfolding the stroller. Keep your hands clear of moving parts when folding and unfolding the stroller.
- Avoid injury from pinching or finger entrapment. Keep children away when inserting the Helix+ SmartHub®. Keep your hands clear of moving parts when inserting and removing the Helix+ SmartHub®.

WARNING

- When docking or adjusting your seats, keep hands and fingers, especially those of children, clear of moving parts and the SmartHubs.
- Keep SmartHub® areas clean. Keep all metal and plastic parts clear of objects, debris and liquids to allow proper and safe functionality.
- Listen for audible CLICK which indicates that seats are locked into the SmartHubs.
- Always check that the Orbit Baby seats are securely locked into the SmartHubs by tugging upwards and turning.
- Lock the stroller wheels and check stability of the stroller before placing your children in or removing your children from seats.
- When using the seat on the Helix+ rear SmartHub® make sure that the seat is locked in forward-facing position.
- Keep child's hands clear of all moving parts when making adjustments or docking the seat.

- Keep children clear of the stroller when folding or unfolding it.
- Keep your hands and fingers clear of moving parts as you fold the stroller.
- Do not allow children to touch or climb on the folded stroller.

STRANGULATION HAZARD :

- Children have STRANGLED in loose or partially buckled harness straps. Fully restrain the child at all times.

WARNING


- Only use the Helix+ handlebar when using the Helix+ stroller frame.
- Maximum weight in the cupholder is 2 lb(0.9 kg) .
- Maximum weight in the pocket of ShadePad / Organizer is 1 lb(0.45 kg).
- For your child's safety, the ShadePad / Organizer must always remain attached to the handlebar. This positioning is crucial to prevent injuries from accidental spills from the cup holder.

Instruction Manual - Orbit Baby Helix+

Important: Read these instructions carefully before use and keep them for future reference.

Your children's safety may be affected if you do not follow these instructions.

The **Orbit Baby Helix+** is made up of six parts ; a **Helix+ SmartHub**, two **Helix+ SmartHub Wheels**, two **Stroller Frame Connectors** and **Helix+ Handlebar Extension Kit** (M N O P).

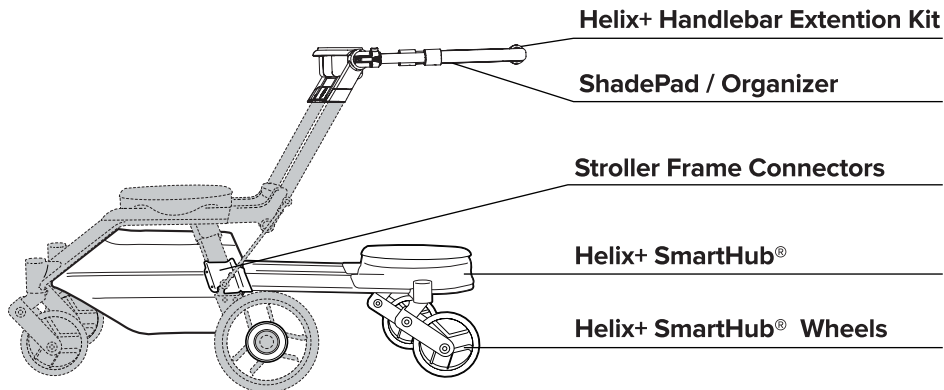

Using this Instruction Manual :

Numbers like 01 in this manual refer to the related sections in the manual foldout. Boxes like □ in the manual refer to the individual steps illustrated in the sections of the manual foldout.


Letters like A refer to the product parts identified on the labeled illustrations located both in this manual and in the manual foldout.

Some generic product names may differ by country. Stroller may be called pushchair. Bassinet may be called carry cot. Bassinet on a stroller frame may be called pram. Rocker may be called stand.

All product specifications are subject to change.



PRODUCT OVERVIEW



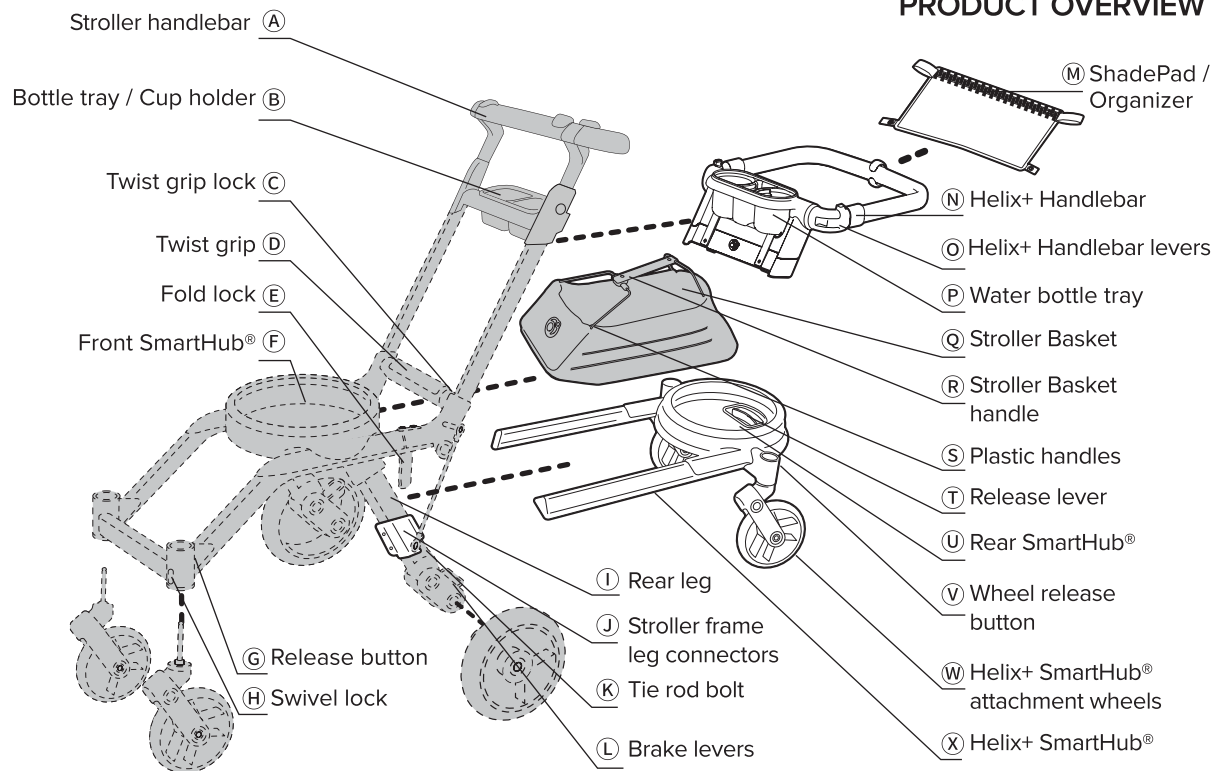


GETTING STARTED



01 Removing the G Series Stroller Handlebar [Ⓐ]

- ☐ First, remove the Bottle tray / Cup holder [Ⓑ] from stroller frame.
- ☐ Using a Phillips Screwdriver, remove the screws located beneath the cup holder—one on each side—then lift the cup holder up and away from the stroller frame.
- ☐ Open both handlebar adjustment latches.


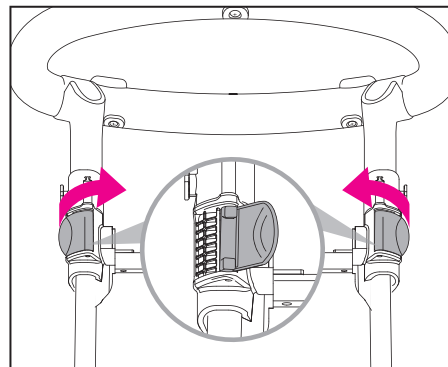
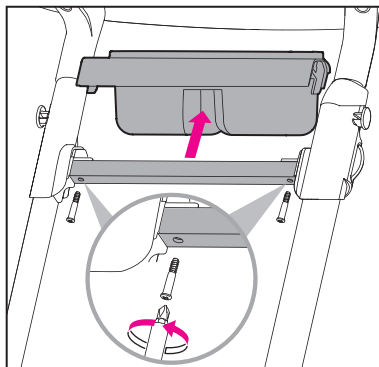
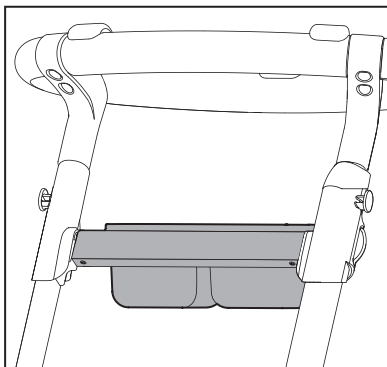


01 Removing the G Series Stroller Handlebar [Ⓐ] (cont'd)

- ☐ Remove the metal axle pins on both sides by gently tapping them upward with the included screwdriver.
- ☐ Once the pins are removed, the adjustment locks and latches will come apart.
- ☐ Remove handlebar by sliding up and away from stroller frame.





*Note: Once all pins and the cup holder are removed, you can lift the entire handlebar assembly away from the stroller frame.

Reminder: Store all parts in a safe place for future use.

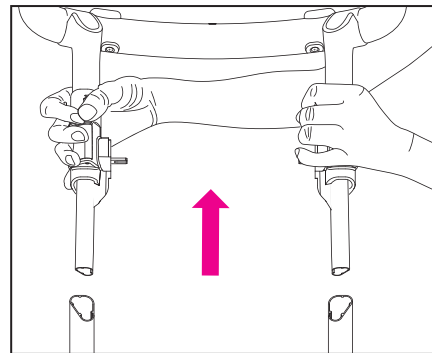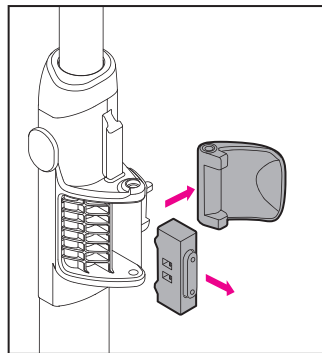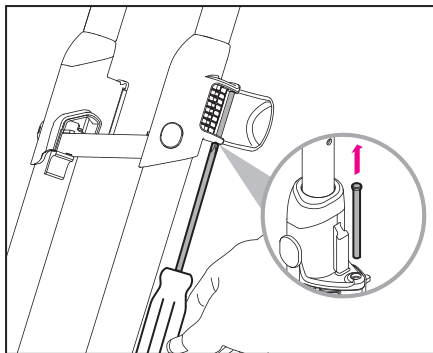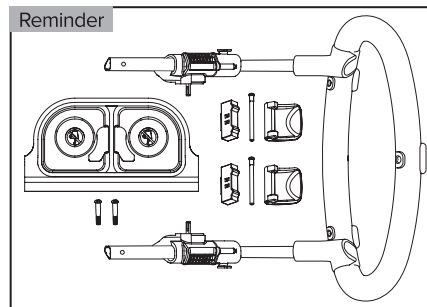

02 Assembling the Helix+ Handlebar [®]

- ☐ Handlebar extender will arrive folded. It must be open to attach onto stroller frame.
- ☐ To unfold, locate the grey latches on the left and right sides of the handlebar extender and press to unlock and open the latches.
- ☐ With latches open, you can now rotate the handlebar correct position. Your cup holder will now be facing up.
- ☐ Slide each side of the handlebar extender onto the stroller frame.
Important: Make sure the frame has been completely pushed into the handlebar slots.

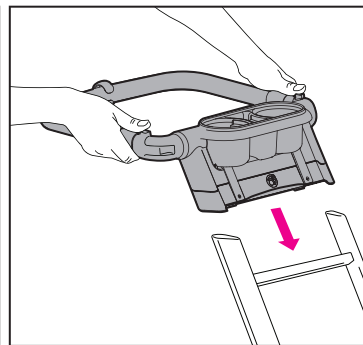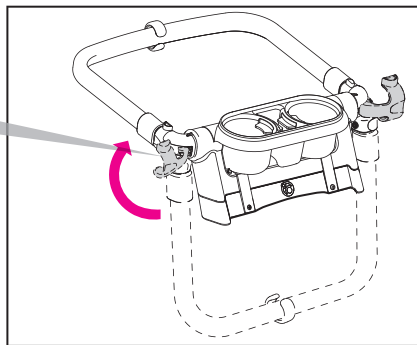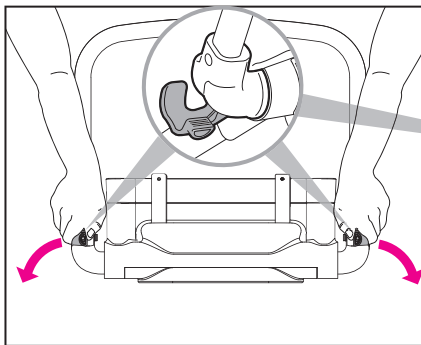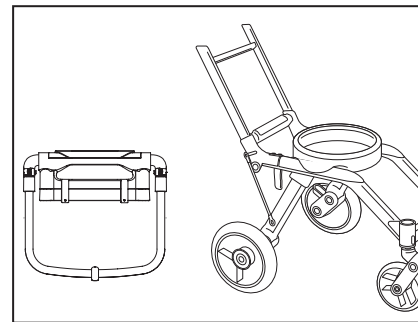

02 Assembling the Helix+ Handlebar [®] (cont'd)

☐ Secure the Helix+ Handlebar


- * Take the two provided screws and insert them through the holes from the outside.
- * Use a screwdriver to tighten both screws firmly, securing the Helix handlebar to the frame.

☐ Attach ShadePad / Organizer [®]

Wrap and fasten the Velcro straps around both sides of the handlebar extender.



Note: Mesh side should be facing up.

☐ Wrap and fasten the Velcro straps around both sides of the handlebar.

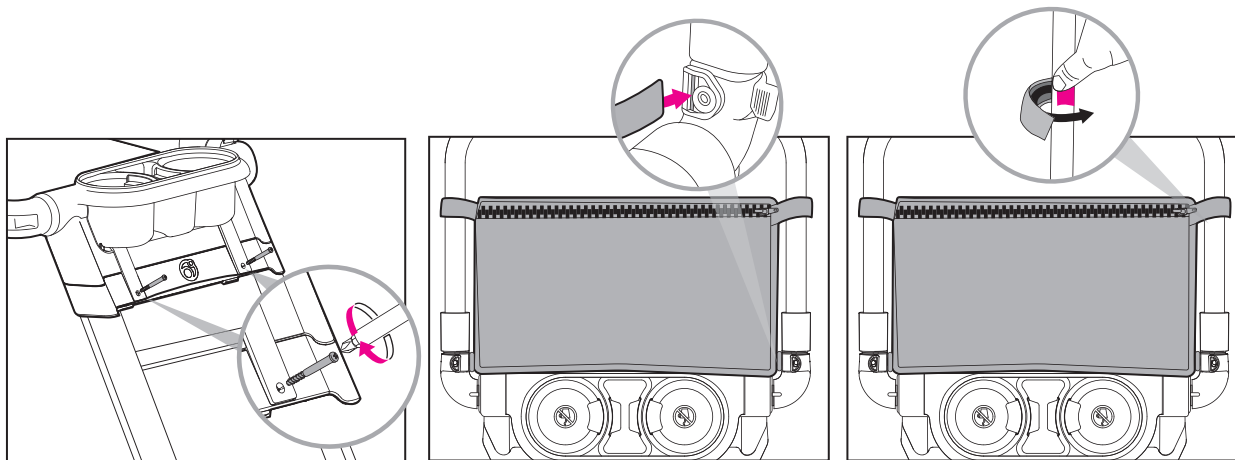



03 Attaching the Stroller Frame Leg Connectors

- ☐ Locate your two Stroller Frame Leg Connector ① assemblies that came with your Helix+ kit. You will be able to open up the Leg Connector by removing the two Phillips screws that are loosely threaded into the Leg Connector. Position each Leg Connector against the corresponding rear stroller frame leg, so that the triangle Helix+ SmartHub® openings are on the inside of the rear leg ①. Slide the open Leg Connector over the rear leg and around the Stroller tie rod bolt ②. Slide the open Leg Connector over the rear leg and around the Stroller tie rod bolt ②.
- ☐ Close the Leg Connector over the rear stroller frame leg. Using the Phillips screwdriver tool, fully tighten the two mounting bolts to secure the Leg Connector in place. Check your installation by twisting on the Leg Connector to ensure it does not move. Repeat with the other Leg Connector.

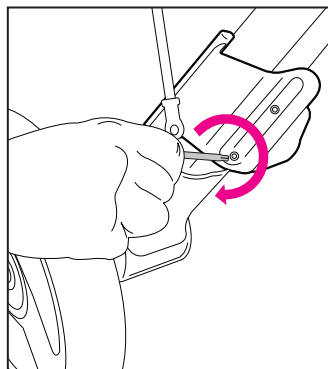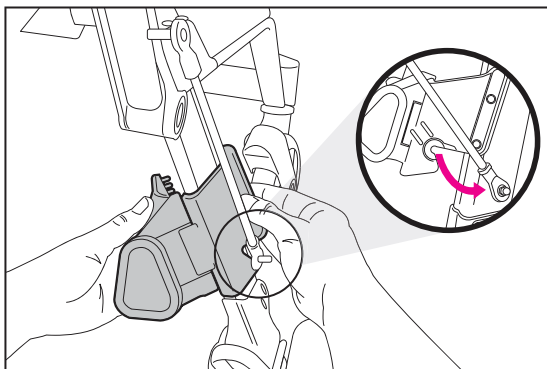

04 Attaching the Stroller Basket ④


- ☐ Insert the Stroller Basket handle ③ into the rail on the underside of the front SmartHub®. You will hear a **CLICK** when it locks in place.
- ☐ Expose the plastic handles ⑤ through the opening in the basket fabric and then fix the front of the Stroller Basket to the stroller frame by inserting the plastic handles one at a time into the openings on the front part of the stroller frame.

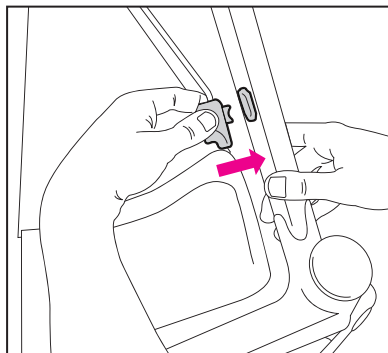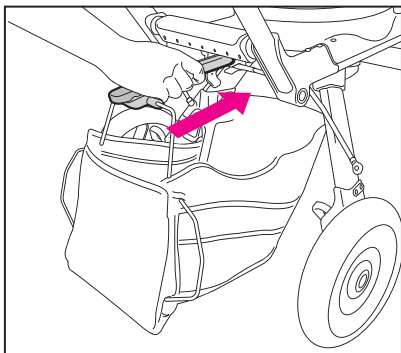

05 Assembling and attaching the Helix+ SmartHub®

- ☐ Insert the two Helix+ SmartHub® wheels (W) . You will hear a **CLICK** when they are locked in place.
- ☐ Grasp the Helix+ SmartHub® with one hand while holding the stroller frame with your other hand. Pull on the release lever (T) and guide both tube ends into the stroller frame Leg Connectors (J) until they are fully inserted. You will hear a **CLICK** when the Helix+ SmartHub® is locked into place.



Assembly of the Orbit Baby Helix+ is now complete

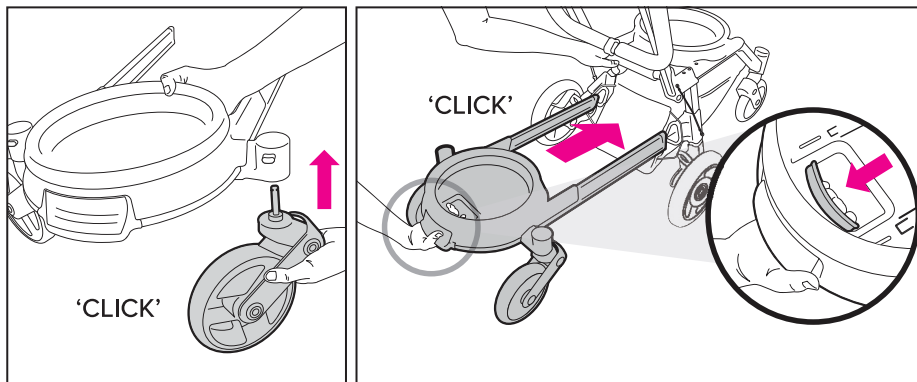

○ USING YOUR ORBIT BABY SEATS WITH THE HELIX+



06 Loading your child into the rear Helix + SmartHub® seat

- ☐ Rotate the Infant Car Seat or Stroller Seat by pulling on one or both levers and rotating the seat into the sideways loading position.
- ☐ Place your child in the seat and secure according to the seat's instruction manual. Rotate the seat forward-facing to begin strolling.

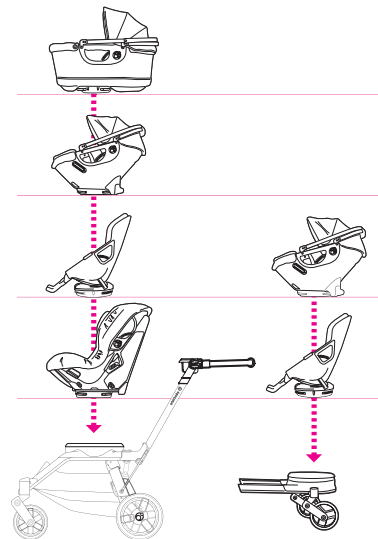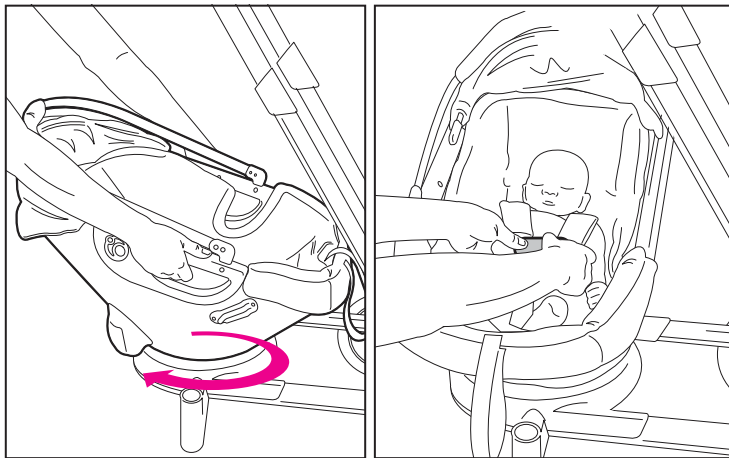

07 Restrictions on the Helix+ double stroller mode

- ☐ Never use both stroller seats in the position shown in the diagram 07 ; a child's feet could become pinched between the footrests. Avoid injury to the child in rear seat from kicking or contact with footrest on stroller seat; only use footrest adjustment position 1 when stroller seat is rear-facing on the front SmartHub®.
- ☐ The Orbit Baby Helix+ double stroller rear SmartHub® fits the Infant Car Seat and the Stroller seat. Seats must be forward facing for strolling but be in side position for viewing and loading.
- ☐ Maximum child weight on rear SmartHub® (front or rear) is 50lbs (23kg). Maximum height for the rear SmartHub® is 34 in (86 cm). Note that 34 in (86 cm) is a reduced height limit for the stroller seat when used on the Helix+ SmartHub®.

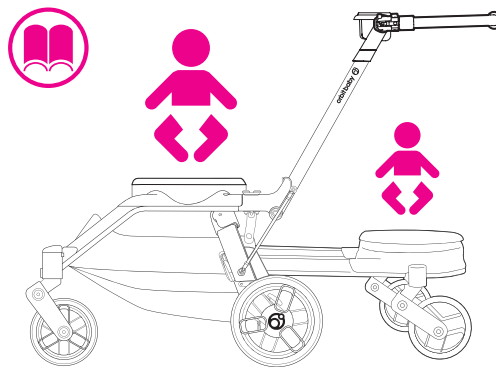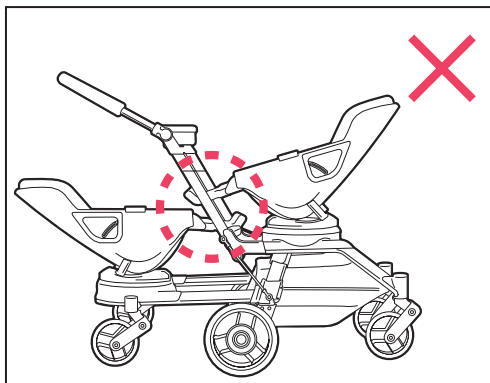



08 Using the Helix+ Handlebar [®]

☐ Adjust Handlebar Length

To adjust handlebar length, unlock each latch, slide handlebar out then lock each latch.

☐ Adjust Handlebar Height




To adjust handlebar height, unlock the side latches, move the handlebar to one of three height settings, then re-lock the latches to secure.

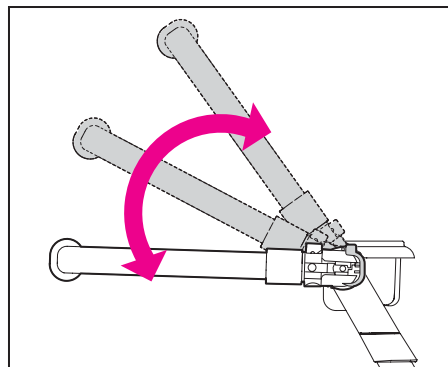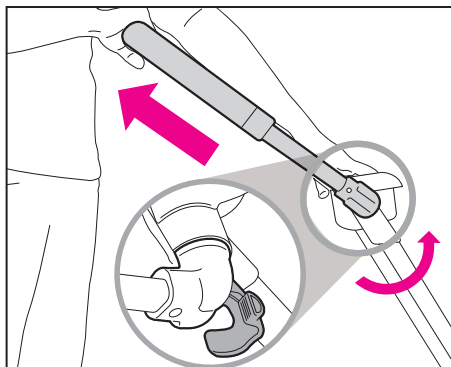

09 Maneuvering your stroller up and down curbs


- ☐ Always look for and use a curb break or ramp if possible. If none is available, stroll up to the curb until both front wheels are almost touching it.
- ☐ Lift the front wheels over the curb by pushing forward with one foot on the curb step of the Helix+ SmartHub® Attachment and pulling back on the handlebar with both hands.
- ☐ Push forward to get the remaining wheels up the curb.

To go down a curb, slowly drive each set of wheels off the curb holding the handlebar to minimize any movement of your children in the seats.

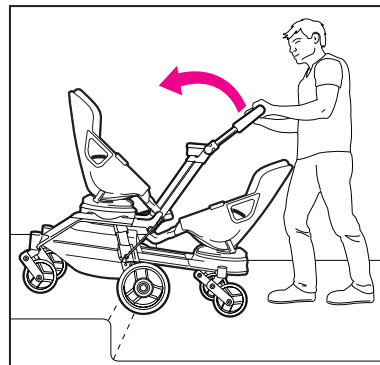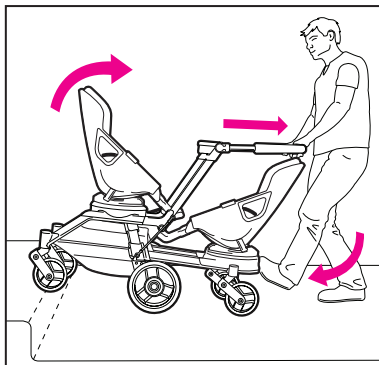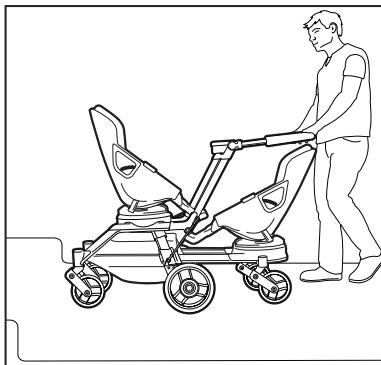


10 Using the Stroller Basket ㉔

- To access the main compartment of the basket, pull open the front or rear Stroller Basket door. There are two additional zippered storage pockets on the sides of the basket.

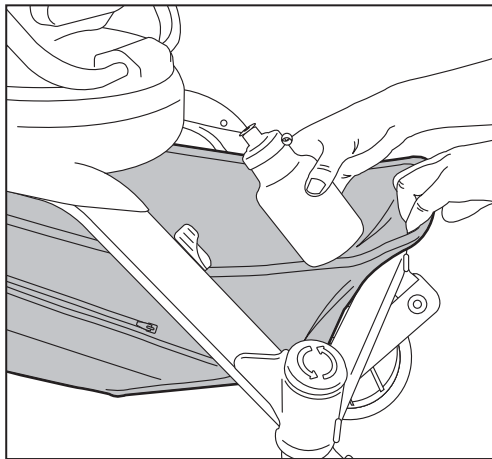


11 Locking the front wheels ㉕

- For bumpy terrain, use the front wheel swivel locks ㉕. To lock the front wheel forward-facing, press down on the front wheel swivel lock button. To unlock, push up on the same button.

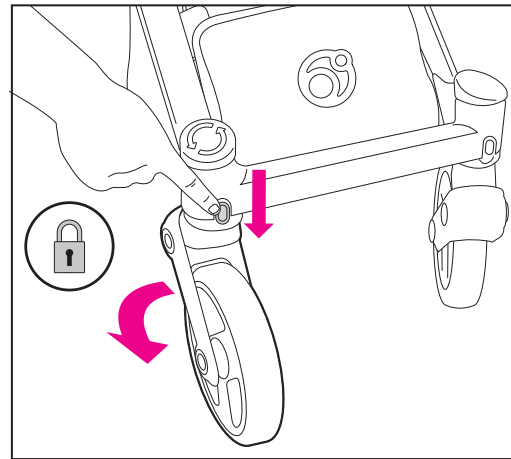

12 Using the stroller brakes


- ☐ Lock the brakes by pressing firmly down on red brake lever ① with your foot. Be sure that the brake is engaged by gently rocking the stroller.
- ☐ Unlock the brakes by pressing on green brake lever.

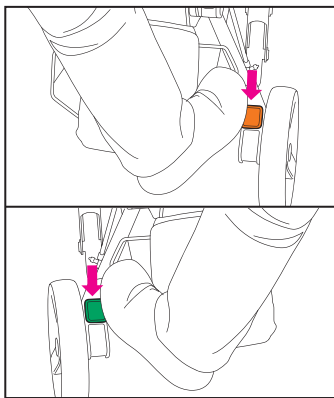

13 Converting your stroller into single mode

- ☐ Remove the Helix+ SmartHub® by grasping the release lever ① and pulling back.
- ☐ When using the Helix+ Handlebar Extension Kit, set the handlebar in the single position by **fully** opening both handlebar levers ②, pushing the handlebar forward, and locking the handlebar levers closed.


The Orbit Baby Sidekick Stroller Board can be used in this mode.

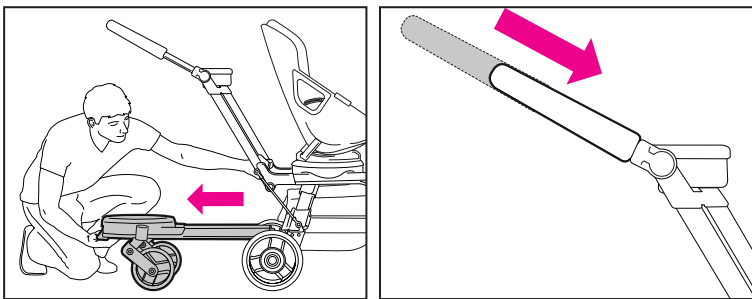

✈ TRAVELING & STORING


14 Detaching and folding the Helix+ double stroller frame

- ☐ Remove children from both seats. Undock the seats from the SmartHubs and set aside where children cannot access them. Remove contents from the stroller basket and ShadePad / Organizer (M).
- ☐ To prepare the handlebar for folding, **fully** open both handlebar levers ☉, push the handlebar to its shortest position, and rotate the handlebar down toward you until it touches the frame. Lock both handlebar levers ☉ closed.

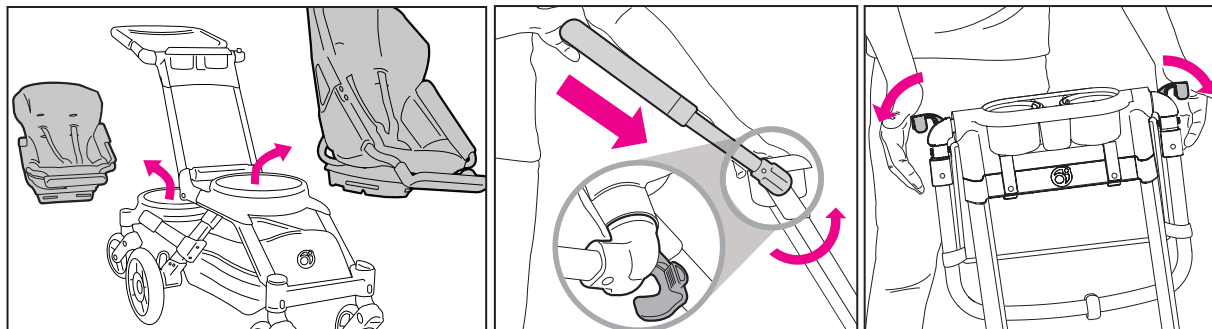




14 Detaching and folding the Helix+ double stroller frame (cont'd)

- ☐ Remove the Helix+ SmartHub® by grasping the release lever ① and pulling back.
- ☐ Release the twist grip lock ② on the stroller frame.
- ☐ Grasp the twist grip ③ on the stroller frame.

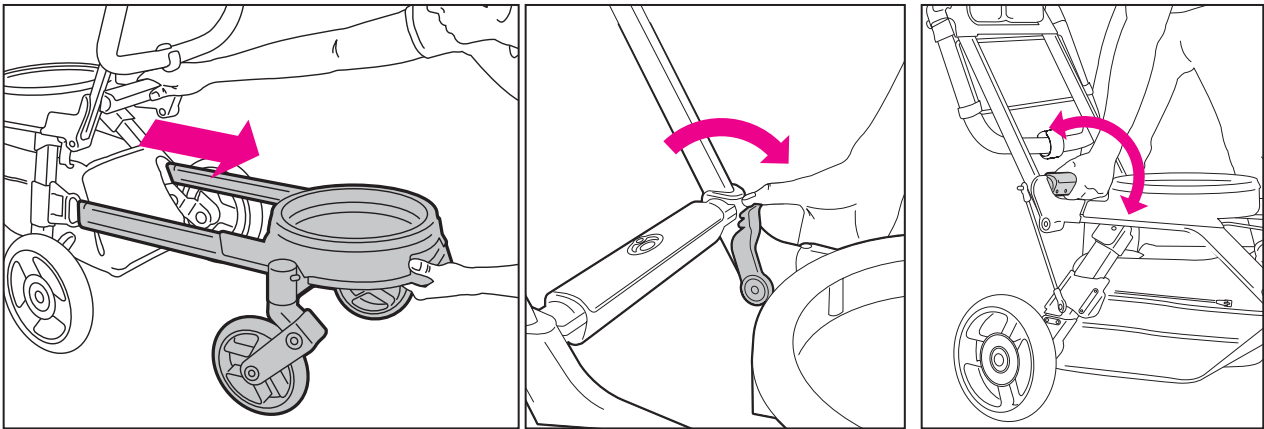



14 Detaching and folding the Helix+ double stroller frame (cont'd)

- ☐ Rotate the twist grip ⑤ and lift to fold the stroller.
- ☐ The fold lock ⑥ will engage when the stroller is fully folded. You will hear a **CLICK**.
- ☐ To ensure the most compact folded dimensions, place the stroller frame so that the handlebar is facing up and the Helix+ SmartHub® Attachment lies on top of the folded frame.

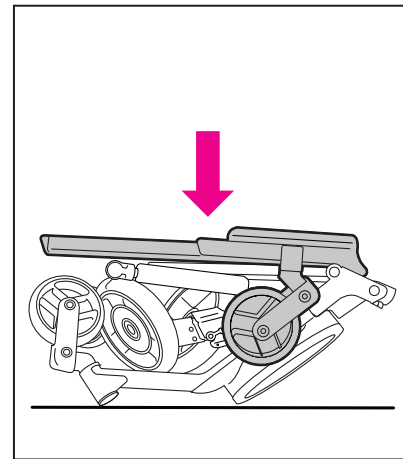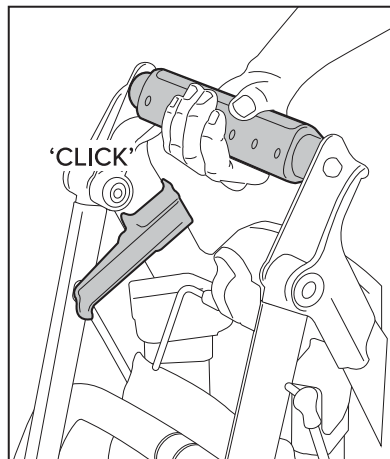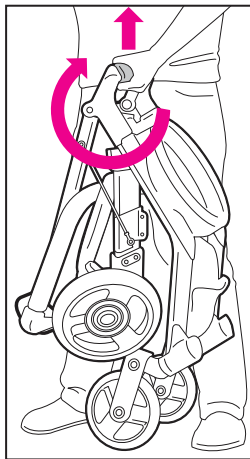

15 Packing the Helix+ double stroller frame for travel or storage

- ☐ Remove both of the stroller front wheels by pressing the release button ⑥ and pulling down on the wheel.
- ☐ Remove both of the Helix+ SmartHub® wheels by pressing the release button ⑤ and pulling down on the wheel. Nest the stroller and Helix+ SmartHub®.

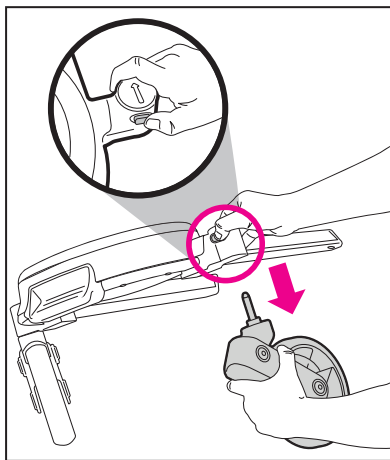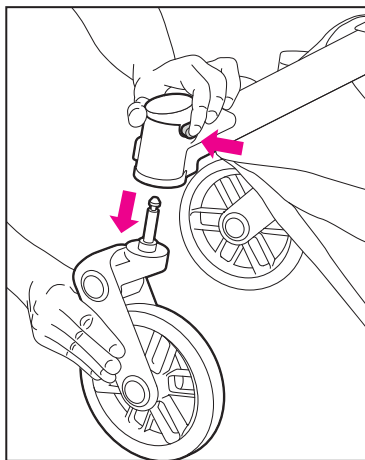

CLEANING

Avoid excessive exposure to sun or heat, which may cause fading or warping. Keep the SmartHubs, twist grip and stroller frame leg connectors free of abrasive grime and moisture. If wet, use a soft cloth to dry. Regularly check all rivets, screws and safety devices for tightness and security. Inspect wheels and brakes and replace if necessary.

All hard goods (plastic and metal) may be wiped clean with a damp cloth. Never use bleach or detergents. Do not submerge or use running water on any metal or plastic parts of the stroller. The stroller basket can be spot cleaned with a clean, wet cloth and dried in place.



www.orbitbaby.com

ORBIT BABY® and related logo, PAPARAZZI SHIELD® and SMARTHUB® are registered trademarks of Orbit Baby, Inc. in the United States and certain other jurisdictions.

ORB881001US_R1_2026APR
©2026 Orbit Baby, Inc.
All rights reserved.

